




ax450

The flagship of our Versamill® compact-machine lineup is our Versamill AX450 precision dental machining center. The AX450 is designed to perform reliably with high precision for the long term. Optimized for custom abutment fabrication from pre-milled blanks, it can process any dental material from zirconia and PMMA to delicate glass ceramics— and even titanium CAD/CAM discs.

With the versamill AX450 you get a complete, industrial-quality manufacturing solution used by dental laboratories and milling centers around the world that is specifically designed to meet the demanding support requirements of dental laboratores & milling centers.

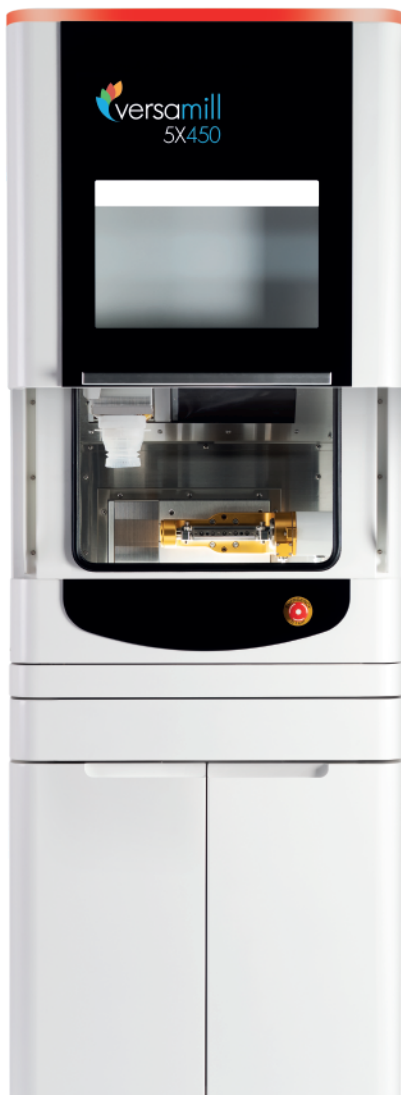

INDICATIONS

- Inlays, onlays, copings, crowns, veneers, splints & guides.
- Removable & fixed bridges, models, abutments, & bars (with optional modules).
- Process PMMA, zirconia, PEEK, Pekkton, composites glass-ceramic, resins, titanium discs, titanium pre-milled blanks and more.
- Block sizes up to 40mm.

\* Not recommended for continuous-duty machining of cobalt-chrome


SPEED WITHOUT SACRIFICE

The strength and rigidity of the Versamill AX450 coupled with the undercut machining capability of full 5-Axis control provides perfect fits, great anatomical detail and the best possible restorative margins with faster cycle times and greater tool life.


- Single-unit zirconia crowns in less than 14 minutes.
- Single-unit glass-ceramic crowns in as little as 15 minutes.
- 6-implant zirconia implant bridges in less than 105 minutes.

RIGID CONSTRUCTION

- Cast and heavy fabricated aluminum-plate frame.
- Zero-stack tolerance, 5-axis trunnion.
- Liner guides & ballscrews with preloaded bearings.
- Closed loop system with micro-stepper technology and position encoders.

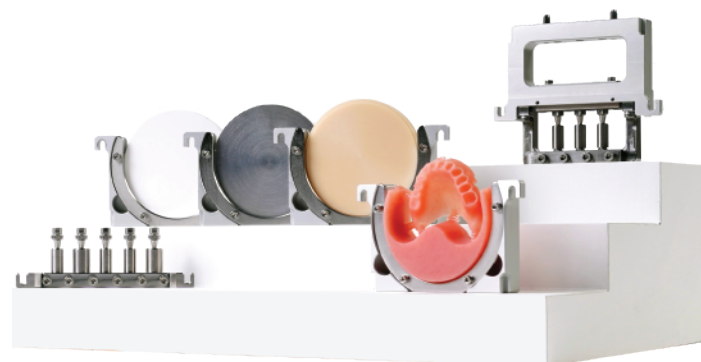


# aX450

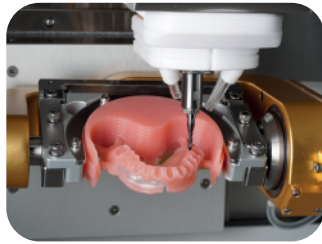


Powerful Spindle and Coolant Delivery.  
Class-leading 1.28kW spindle with coolant delivery system that assures complete saturation of the machining area.




Heavy-gage aluminum fabricated frame provides the rigidity required to absorb vibration and dissipate heat while red, green, & blue LED status lights provide feedback on machine status.

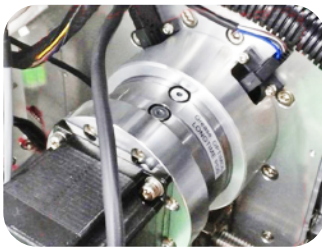


5-axis operation with quick-change universal fixture.  
Rotary axis trunnion driven by high-torque reduction gears with fully supported zero stack tolerance quick-change part holding fixture.

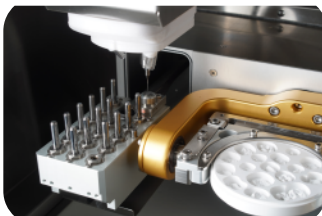


12-station ATC houses sturdy, flex-resisting 6.0mm diameter cutting tools.  
The spacious work area of the Versamill makes for easy operation and part handling.

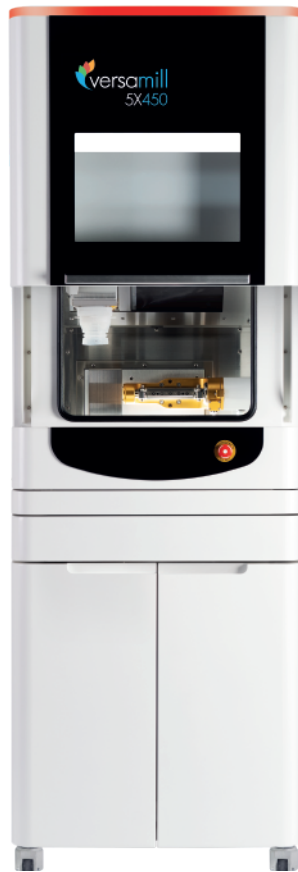

Use of precision ball screws with anti-backlash ball nuts along with linear guides and closed-loop servo drives assures superior dynamic motion and positional accuracy.

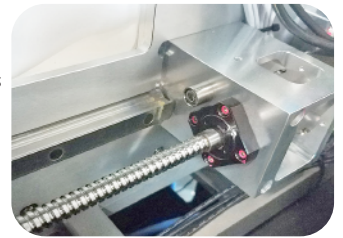

Quick-change 3-unit, convertible pre-form abutment cartridge.  
Facilitates production of ARUM, NT-Trading, DESS & Medentika pre-mill blanks, including full access to post-and subgingiva areas.

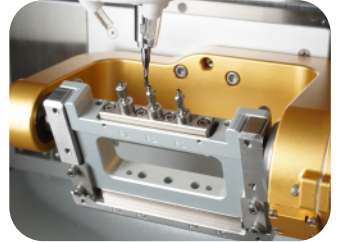

Quick-change 5-unit CAD-block cartridge.  
Facilitates high production of lithium disilicate, Lava Ultimate and other pre-mounted dental materials.




Heavy-duty Machine stand  
Provides stability and storage while housing the cooling liquid filtration and delivery system.



## CAM SOFTWARE: PROVEN & FULL-FEATURED

The versamill AX450 is powered by hyperDENT CAM software from FOLLOW-ME! Technology Group.

hyperDENT incorporates efficient proven milling cycles from the industrial segment to provide maximum process stability and indication quality, including patent-protected milling strategies used for complex materials ensuring perfect surface quality while maximizing tool life.

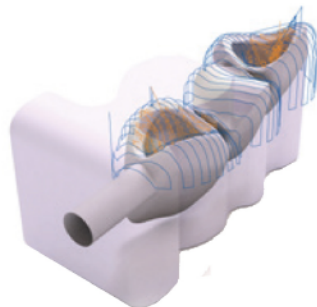

### OPTIONAL MODULES

Full Denture, Template Generator

*As with our Versamill machine technology, we leverage our 40 years of digital design and manufacturing experience - spanning all market segments including the dental industry - to provide additional software enhancements over and above a vendors' standard deliverable product. These unique enhancements, which are not available from any other supplier, provide additional functionality, while assuring unrivaled reliability and increased productivity.*

### Versamill AX450 Specifications

Number of axes:		5 simultaneous
Travel (x, y, z axis):	(mm)	235 x 116 x 130
A Rotational axis:	(degrees)	360°
B Rotational axis:	(degrees)	±30° / ±35° w/C-clamp
Drive Mechanism:		Ballscrew
Way System:		Linear Guide
Repeatability:	(µm)	±5.0
Spindle Power:	(watts)	AC 1.28 kW max
Spindle Speed:	(rpm)	6,000 - 60,000
ATC number of tools:	6.0mm Ø	12
Axis Drive System	Closed-Loop	Microstepper w/Encoder
Blank disc diameter:	(mm)	98 Ø
Machine size (W x H x L):	(mm)	603 x 674 x 790
Table size (W x H x L):	(mm)	603 x 674 x 944
Weight:	(Kg)	263Kg
Input Power	(VAC/50-60Hz)	220 Single Phase